

- 15-533-1017 Panel Mount 4000 (3.5 A Controller)
- 15-535-1017 Standard Enclosure 4000 (3.5 A Controller)
- 15-536-1017 Blank Cover 4000 (3.5 A Controller)
- 15-539-0017 Panel Mount Controller 4050 (8 A Controller)
- 15-540-0017 Standard Enclosure 4050 (8 A Controller)


Dynamatic

MODEL 4000 AND 4050 WITH MUTUATROL®

These instructions relate specifically to the Model 4000 and 4050 controllers assembled for Speed Control with Mutuatrol modification. Connection diagram, schematic diagram, switch programming, plug wiring connections, adjustment procedure and recommended spare parts list for these specific assemblies are contained in this Instruction Sheet. Any differences between these two controllers are clearly noted. Use Instruction Manual IM-130006-83XX with this Instruction Sheet for complete installation, operation and maintenance instructions.

CAUTION: Above ground electrical potentials can be hazardous. Always disconnect electrical power before working on the controller.

*Heat sink assembly, HS1, and its wiring are not supplied on Model 4000 controllers. The parts are mounted on the 15-530-5 main 4000 board.

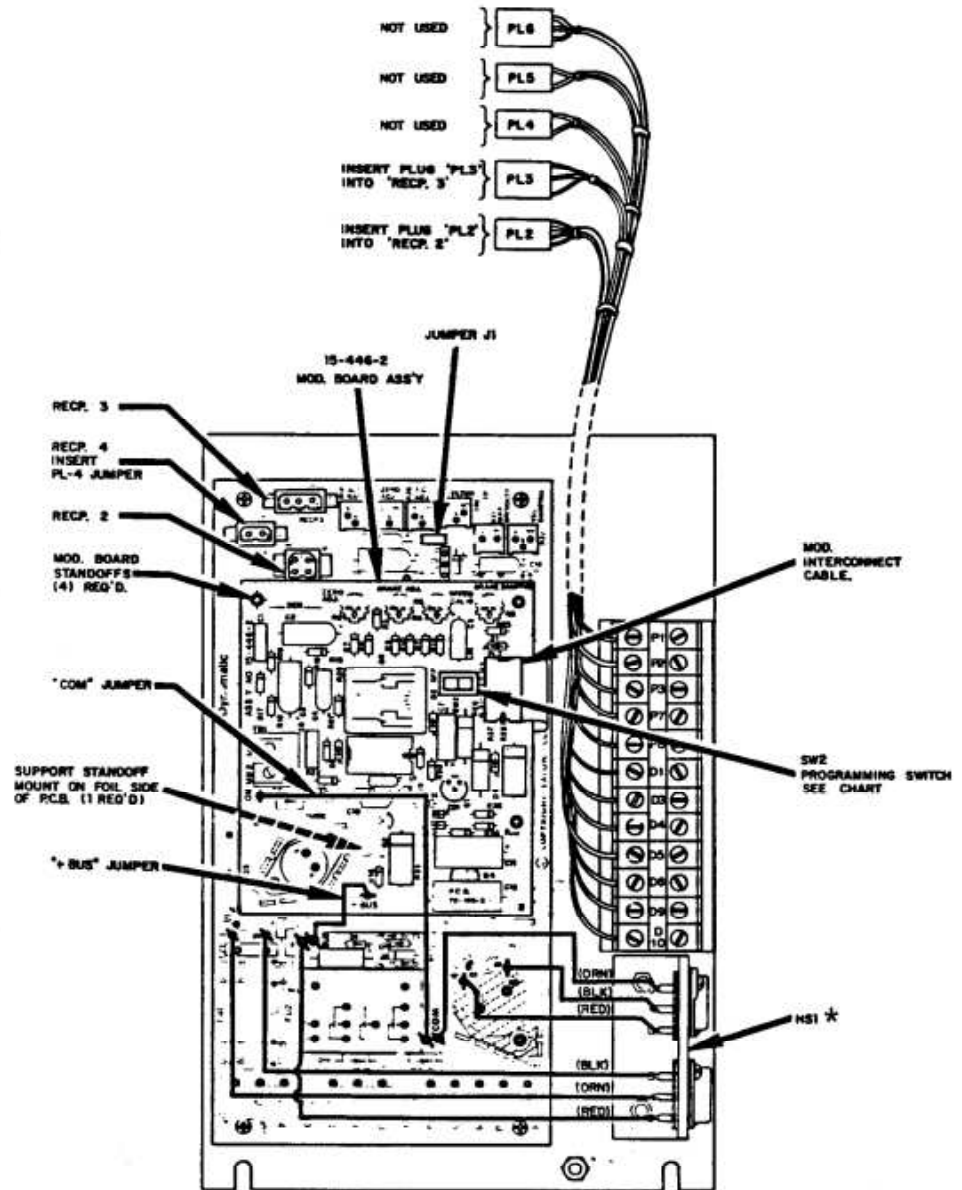

15-539-17D/A

Model 4050 Controller Panel with Mutuatrol Modification Board 15-446-2 (shown)

